

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED “A” THRU “BRAKE”

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
5W30	5W30 MOTOR OIL	AIRB	AIR BAG	ACB	AIR CONDITIONER BELT
10W30	10W30 MOTOR OIL	ABFS	AIR BAG (FRONT SIDE)	HPH	AIR CONDITIONER HIGH SIDE HOSE
10W40	10W40 MOTOR OIL	ABAS	AIR BAG ARMING SENSOR	ACH	AIR CONDITIONER HOSE
20W50	20W50 MOTOR OIL	ABCS	AIR BAG CLOCK SPRING	LPH	AIR CONDITIONER LOW SIDE HOSE
30W	30W MOTOR OIL	ABCC	AIR BAG CONTACT COIL	CON	AIR CONDITIONING CONDENSOR
40W	40W MOTOR OIL	ABCU	AIR BAG CONTROL UNIT	ACSL	AIR CONDITIONING SPRING LOCK SEAL
50W	50W MOTOR OIL	ABDM	AIR BAG DIAGNOSTIC MODULE	ACS	AIR CONTROL SENSOR
FIFM	5TH MEMBER	ABKM	AIR BAG MODULE (KNEE UNIT)	ACV	AIR CONTROL VALVE
5W20	5W20 MOTOR OIL	ABS	AIR BAG SENSOR	ADV	AIR DIVERTER VALVE
APSS	AB PASSENGER SIDE SWITCH	ABSF	AIR BAG SENSOR (FRONT)	ADM	AIR DOOR MOTOR
CLR	A-C CLUTCH RELAY	ABSP	AIR BAG SENSOR (PASSENGER)	AFM	AIR FLOW METER
AOK	A-C COMPRESSOR OVERHAUL KIT	ABSR	AIR BAG SENSOR (REAR SIDE)	AH	AIR HORN
ACCM	AC CONTROL MODULE	ABSS	AIR BAG SENSOR (SIDE)	AIT	AIR INJECTION TUBE
ACFK	A-C FLUSH KIT	ABA	AIR BRAKE ACTUATOR	AIB	AIR INTAKE BELLOWES
AHPS	A-C HI PRESSURE SWITCH	ABAC	AIR BRAKE AIR CHAMBER	AL	AIR LINE
ACLC	A-C LOW PRESSURE CUTOFF SWITCH	ABC	AIR BRAKE COMPRESSOR	AP	AIR PUMP
LPSW	AC LOW PRESSURE SWITCH	ABCB	AIR BRAKE COMPRESSOR BELT	APB	AIR PUMP BELT
PFCS	A-C PRESSURE FAN CONTROL SWITCH	ABD	AIR BRAKE DIAPHRAGM	APBR	AIR PUMP BRACKET
ACPS	A-C PROGRAMMER-SERVO	ABL	AIR BRAKE LINE	APCV	AIR PUMP CHECK VALVE
ACRK	A-C RETROFIT KIT	ABSA	AIR BRAKE SLACK ADJUSTER	APF	AIR PUMP FILTER
ACSM	A-C SERVO MOTOR ASSEMBLY	ACBR	AIR CHAMBER	ASV	AIR SPRING VALVE
SLS	A-C SPRING LOCK SEALS	ACD	AIR CHAMBER DIAPHRAGM	ASCS	AIR SUCT CNTRL SOLENOID
ACTC	A-C THERMOSTATIC CONTROL	ACTS	AIR CHARGE TEMP SENSOR	ASCV	AIR SUCT CNTRL VALVE
ACAB	ACCELERATOR CABLE	ACE	AIR CLEANER ELEMENT	ASC	AIR SUSPENSION COMPRESSOR
ACPU	ACCELERATOR PUMP	ACF	AIR CLEANER FILTER	ASCR	AIR SUSPENSION COMPRESSOR RELAY
ACC	ACCUMULATOR	ACM	AIR CLEANER MOUNTS	ASD	AIR SUSPENSION DRYER ASSEMBLY
ACCP	ACCUMULATOR PISTON	ACLT	AIR CLEANER TEMP SENSOR	ASM	AIR SUSPENSION MODULE
ACCS	ACCUMULATOR SPRING	ACVM	AIR CLEANER VACUUM MOTOR	ASSA	AIR SUSPENSION SWITCH ASSEMBLY
ARD	ACCUMULATOR-RECEIVER DRIER	ACMP	AIR COMPRESSOR	ATS	AIR TEMPERATURE SENSOR

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AS	ALIGNMENT ADJUSTMENT SHIM	ALSV	ANTI-LOCK SOLENOID VALVE	BARS	BAROMETRIC SENSOR
AE	ALIGNMENT ECCENTRIC	ALS	ANTI-LOCK SWITCH	BAT	BATTERY
ALT	ALTERNATOR	ALWS	ANTI-LOCK WHEEL SENSOR	BATC	BATTERY CABLE
ALTB	ALTERNATOR BEARINGS	ANSC	ANTI-SEIZE COMPOUND	BHD	BATTERY HOLD DOWN
AB	ALTERNATOR BELT	AST	ASPIRATOR TUBE	BTX	BATTERY RECLAMATION FEE
ALB	ALTERNATOR BRACKET	ASTV	ASPIRATOR VALVE	BTE	BATTERY TERMINAL END
ALBR	ALTERNATOR BRUSHES	ASDM	AUTO SHUT DOWN MODULE	BEA	BEARING
ALTP	ALTERNATOR PULLEY	AC	AUTOMATIC CHOKE	BLT	BELT
ALBS	ALTERNATOR STATOR	ACOK	AUTOMATIC CHOKE	BLTD	BELT DRESSING
ALTS	ALTITUDE SOLENOID	AISA	AUTOMATIC IDLE SPEED ASSY	BT	BELT TENSIONER
AMTS	AMBIENT TEMPERATURE SENSOR	ASR	AUTOMATIC SHUTDOWN RELAY	BDCA	BLEND DOOR CONTROL ASSEMBLY
AMM	AMMETER	ATAU	AUTOMATIC TIMING ADVANCE UNIT	BTF	BLOCK TESTER FLUID
ALBU	ANIT-LOCK BRAKE UNIT	ATF	AUTOMATIC TRANSMISSION FLUID	BM	BLOWER MOTOR
ANT	ANTENNA	AT	AUTOMATIC TRANSMISSION(REBUILT)	BMR	BLOWER MOTOR RELAY
ABFV	ANTI-BACK FIRE VALVE	AAR	AUXILARY AIR REGULATOR	BMRS	BLOWER MOTOR RESISTOR
ADS	ANTI-DIESELING SOLENOID	AFF	AUXILARY FUEL FILTER	BMS	BLOWER MOTOR SWITCH
AF	ANTI-FREEZE(PER GALLON)	AVB	AUXILIARY VALVE BODY	BCM	BODY CONTROL MODULE
ALC	ANTI-LOCK ACCUMULATOR	AV	AUXILIARY VALVES	BWH	BODY WIRING HARNESS
ALBB	ANTI-LOCK BRAKE BOOSTER	AES	AXLE ENGAGEMENT SWITCH	B	BOLT
ALCR	ANTI-LOCK CONTROL RELAY	AXG	AXLE GREASE	BRAC	BRACKET
ALCU	ANTI-LOCK CONTROL UNIT	ALW	AXLE LOCK WASHER	BAH	BRAKE AIR HOSES
ALFS	ANTI-LOCK FLUID LEVEL SENSOR	BULS	BACK UP LIGHT SWITCH	BBS	BRAKE BLEEDER SCREW
ALLA	ANTI-LOCK LATERAL ACCELEROMETER	BAPT	BACKPRESSURE TRANSDUCER	BB	BRAKE BOOSTER
ALMO	ANTI-LOCK MODULATOR	BASA	BALANCE SHAFT ASSEMBLY	BBCV	BRAKE BOOSTER CHECK VALVE
ALM	ANTI-LOCK MODULE	BSB	BALANCE SHAFT BELT	BC	BRAKE CABLE
ALPS	ANTI-LOCK PRESSURE SWITCH	BJ	BALL JOINT	CALL	BRAKE CALIPER (LEFT)
ALPV	ANTI-LOCK PROPORTIONING VALVE	BAL	BALLAST RESISTOR	CALR	BRAKE CALIPER (RIGHT)
ALPM	ANTI-LOCK PUMP MOTOR	BANK	BANNER KIT	CALP	BRAKE CALIPER PISTON
ALPR	ANTI-LOCK PUSH ROD ASSEMBLY	BPS	BAROMETRIC PRESSURE SENSOR	BK	BRAKE CLEAN

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED "BRAKE" THRU "EGR"

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
BCLP	BRAKE CLIPS	CAMG	CAMSHAFT COVER GASKET	CIRB	CIRCUIT BREAKER
BCV	BRAKE COMBINATION VALVE	CAG	CAMSHAFT GEAR	CLOK	CLOCK
BD	BRAKE DRUM	CAPS	CAMSHAFT POSITION SENSOR	CBPA	CLUTCH & BRAKE PEDAL ASSEMBLY
BDH	BRAKE DRUM HUB	CS	CAMSHAFT SEAL	CLC	CLUTCH CABLE
BF	BRAKE FLUID (PER PINT)	CAMS	CAMSHAFT SUPPORT	CLCA	CLUTCH CABLE ADJUSTER
BFQ	BRAKE FLUID (PER QUART)	CTG	CAMSHAFT TOWER GASKET	CD	CLUTCH DISC
BHWK	BRAKE HARDWARE KIT	CNSW	CANCEL SWITCH	CLF	CLUTCH FORK
BH	BRAKE HOSE	CANS	CANISTER PURGE SOLENOID	CLK	CLUTCH KIT
BLS	BRAKE LIGHT SWITCH	C	CARBURETOR	CMC	CLUTCH MASTER CYLINDER
BL	BRAKE LINE (PER FT.)	CAH	CARBURETOR AIR HORN	CMSA	CLUTCH MASTER-SLAVE ASSEMBLY
BP	BRAKE PADS	CBP	CARBURETOR BASE PLATE	CPA	CLUTCH PEDAL ASSEMBLY
BPM	BRAKE PRESSURE MODULATOR	CC	CARBURETOR CLEANER	CPB	CLUTCH PILOT BEARING
BR	BRAKE ROTOR	CG	CARBURETOR GASKET	CSET	CLUTCH SET (PLATE, TO BEARING & DISC)
BSA	BRAKE SELF ADJUSTERS	COK	CARBURETOR OVERHAUL KIT	CSC	CLUTCH SLAVE CYLINDER
BSS	BRAKE SENSOR SWITCH	CASW	CASTER WASHER	CLSW	CLUTCH SWITCH
BS	BRAKE SHOES	CCC	CASTER-CAMBER CAM	COIL	COIL SPRINGS
BSK	BRAKE SPRING KIT	CCK	CASTER-CAMBER KIT	CW	COIL WIRE
BVH	BRAKE VACUUM HOSE	CAT	CATALYTIC CONVERTER	CSI	COLD START INJECTOR
BUSH	BUSHING	CL	CENTER LINK	CSV	COLD START VALVE
BPT	BY PASS TUBE	CSB	CENTER SUPPORT BEARING	CST	COLUMN SHIFT TUBE
BPH	BY-PASS HOSE	CTH	CENTRAL TURBINE HOUSING	CSA	COMBINATION SWITCH ASSY
CAF	CABIN AIR FILTER	TENS	CHAIN TENSIONER	COM	COMPRESSOR
CAB	CABLE	CHTS	CHARGE TEMP SENSOR	COMC	COMPRESSOR CLUTCH
CK	CALIPER KIT	CV	CHECK VALVE	COMH	COMPRESSOR HOUSING
CBK	CAMBER BUSHING KIT	CHO	CHOKE	COMP	COMPRESSOR PULLEY
CSK	CAMBER SERVICE KIT	CHT	CHOKE HEAT TUBE	COMS	COMPRESSOR SHAFT SEAL
CTAK	CAMBER TOE ADJUSTMENT KIT	CPO	CHOKE PULL OFF	CR	CONNECTING ROD
CAM	CAMSHAFT	CHTM	CHOKE THERMOSTAT	CROB	CONNECTING ROD BEARING
CAMB	CAMSHAFT BEARINGS	CLA	CIGARETTE LIGHTER ASSEMBLY	CB	CONTROL BOX

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
CM	CONTROL MODULE	CMBB	CROSSMEMBER BUSHINGS	DMVS	DIST MODULATOR VALVE SWITCH
CU	CONTROL UNIT	CA	CROSSTUBE ARM	D	DISTRIBUTOR
CTC	CONVERTIBLE TOP CABLE	CTA	CROSSTUBE ASSEMBLY	DISB	DISTRIBUTOR BUSHING
CTM	CONVERTIBLE TOP MOTOR	CCRS	CRUISE CONTROL BRK RELEASE SWITCH	DC	DISTRIBUTOR CAP
CTR	CONVERTIBLE TOP RELAY	CCBS	CRUISE CONTROL BUTTERFLY SWITCH	DISG	DISTRIBUTOR GEAR
CFM	COOLANT FAN MODULE	CCAB	CRUISE CONTROL CABLE	DOR	DISTRIBUTOR O RING
CF	COOLANT FILTER	CCCR	CRUISE CONTROL CLUTCH RELEASE SWITCH	DPU	DISTRIBUTOR PICK-UP
COOH	COOLANT HOSE	CCR	CRUISE CONTROL REGULATOR	DISR	DISTRIBUTOR RELUCTOR
CLS	COOLANT LEVEL SENSOR	CCS	CRUISE CONTROL SERVO	DISS	DISTRIBUTOR SHAFT
CRB	COOLANT RECOVERY BOTTLE	CCSS	CRUISE CONTROL SPEED SENSOR	DSTA	DISTRIBUTOR STATOR
CTOS	COOLANT TEMP OVERRIDE SWITCH	CCSW	CRUISE CONTROL SWITCH	DH	DOOR HANDLE
CTS	COOLANT TEMPERATURE SENSOR	CCU	CRUISE CONTROL UNIT	DHB	DOOR HINGE BUSHING
CT	COOLANT TUBE	CCVS	CRUISE CONTROL VACUUM BLEED SWITCH	DHP	DOOR HINGE PIN
CVVS	COOLANT VACUUM VALVE SWITCH	CCWH	CRUISE CONTROL WIRING HARNESS	DLC	DOOR LOCK CYLINDER
CSFT	COOLING SYS FLUSH TEE	CVJ	CV JOINT	DLR	DOOR LOCK RELAY
CORE	CORE CHARGE	CH	CYLINDER HEAD	DMIR	DOOR REAR MIRROR
CSW	COURTESY LIGHT SWITCH	DLB	DASH LIGHT BULB	DKC	DOWNSHIFT - KICKDOWN CABLE
CCB	CRANKCASE BREATHER FILTER	DWH	DASH WIRING HARNESS	DSS	DOWNSHIFT SOLENOID
CRK	CRANKSHAFT	DA	DASHBOARD ASSEMBLY	DL	DRAG LINK
CRKD	CRANKSHAFT DAMPER	DP	DASHPOT	DHHC	DRAIN HOSE HOSE CLAMP
CRD	CRANKSHAFT DISC	DV	DECELERATION VALVE	DS	DRIVE SHAFT
CRKS	CRANKSHAFT FRONT SEAL	DETS	DETONATION SENSOR	ECMP	ECM PROM CALIBRATOR
CRKG	CRANKSHAFT GEAR	DER	DIAGNOSTIC ENERGY RESERVE	ECMR	ECM-POWER RELAY
CRKK	CRANKSHAFT KIT	DEC	DI-ELECTRIC COMPOUND	ECON	ECONOMIZER VALVE
CPS	CRANKSHAFT POSITION SENSOR	DB	DIFFERENTIAL BEARING	EGRS	EGR CONTROL SOLENOID
CP	CRANKSHAFT PULLEY	DG	DIFFERENTIAL COVER GASKET	EGRC	EGR COOLER
CRKP	CRANKSHAFT PULLEY	DSB	DIFFERENTIAL SIDE BEARINGS	EGRM	EGR MODULATOR
COP	CROSS OVER PIPE	DT	DIODE TRIO	EGRF	EGR PRESSURE FEEDBACK SENSOR
CMBR	CROSSMEMBER ASSEMBLY	DBQ	DISC BRAKE QUIET	EGRT	EGR TUBE

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED “ELBOW” THRU “HEADLIGHT”

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
EWG	ELBOW WASTE GATE	ERTS	ENGINE ROOM THERMAL SWITCH	FM	FAN MOTOR
EDLS	ELECTRIC DOOR LOCK SOLENOID	EWH	ENGINE WIRING HARNESS	FR	FAN RELAY
EF	ELECTRIC FAN ASSEMBLY	EVAC	EVACUATION AND RECHARGE	FSH	FAN SHROUD
EFM	ELECTRIC FAN MOTOR	ECC	EVAPORATION CONTROL CANISTER	FS	FAN SWITCH
EFMR	ELECTRIC FAN MOTOR RELAY	E	EVAPORATOR	FBCS	FEEDBACK CONTROL SOLENOID
ERS	ELECTRIC RETARD SWITCH	EVAP	EVAPORATOR	FL	FLASHER
EVS	ELECTRICAL VACUUM SWITCH	EVPS	EVP POSITION SENSOR	FCH	FLEXIBLE CLUTCH HOSE
ECM	ELECTRONIC CONTROL MODULE	EVOS	EVP SHUT OFF SOLENOID	FLT	FLOAT
ECR	ELECTRONIC CONTROL RELAY	EAST	EXHAUST AIR SUPPLY TUBE	FLOW	FLOWMETER
ECU	ELECTRONIC CONTROL UNIT	EDG	EXHAUST DONUT GASKET	FLY	FLYWHEEL
ED	ELECTRONIC DASH ASSEMBLY	EFG	EXHAUST FLANGE GASKET	FOGL	FOG LAMP
IGS	ELECTRONIC IGNITION SENSOR	EGR	EXHAUST GAS RECIRCULATION VALVE	FWHA	FREE WHEELING HUB ASSEMBLY
ESMA	ELECTRONIC SHIFT MOTOR ASSY	EH	EXHAUST HANGER	FRZ	FREEZE PLUG
ESPD	ELECTRONIC SPEEDOMETER	EHCS	EXHAUST HEAT CONTROL SOLENOID	FRD	FREDON DYE
EVR	ELECTRONIC VACUUM REGULATOR	EM	EXHAUST MANIFOLD	FO	FREON OIL
EBLS	EMEGENCY BRAKE WARNING LIGHT SWITCH	EMG	EXHAUST MANIFOLD GASKET	FAA	FRONT ACTUATOR ASSY
EBC	EMERGENCY BRAKE CABLE	EMGS	EXHAUST MANIFOLD GASKET SET	FAS	FRONT AIR SPRING
EBH	EMERGENCY BRAKE HARDWARE	EMHV	EXHAUST MANIFOLD HEAT VALVE	FA	FRONT AXLE
EBL	EMERGENCY BRAKE LEVER	EP	EXHAUST PIPE	FAAS	FRONT AXLE ASSEMBLY
EBPA	EMERGENCY BRAKE PEDAL ASSEMBLY	ES	EXHAUST STUD	FAC	FRONT AXLE CARRIER
EBRD	EMERGENCY BRAKE RELEASE DIAPHRAGM	ESN	EXHAUST STUD NUT	FAH	FRONT AXLE HOUSING
EBRM	EMERGENCY BRAKE RELEASE MOTOR	EV	EXHAUST VALVE	IBB	FRONT AXLE I-BEAM
EBSS	EMERGENCY BRAKE SHOE SET	EXB	EXPANSION BLOCK	FASS	FRONT AXLE SEAL
EBVS	EMERGENCY BRAKE VACUUM SWITCH	ET	EXPANSION TUBE	FAXS	FRONT AXLE SHAFT
ENG	ENGINE	EXV	EXPANSION VALVE	TFB	FRONT BEARING
EC	ENGINE CLEANER	EXH	EXTENSION HOUSING	FCGS	FRONT COVER GASKET SET
ECB	ENGINE CRADLE BUSHINGS	FB	FAN BELT	FDC	FRONT DIFFERENTIAL CASE
EOGS	ENGINE OVERHAUL GASKET SET	FBLD	FAN BLADE	FDOA	FRONT DIFFERENTIAL CARRIER
EOK	ENGINE OVERHAUL KIT	FC	FAN CLUTCH	FDBP	FRONT DISC BRAKE PADS

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
FDH	FRONT DOOR HANDLE	FG	FUEL GAUGE	FUL	FUSIBLE LINK
FDIL	FRONT DOOR INSIDE LATCH	FGS	FUEL GAUGE SENDER	GC	GAS CAP
FDLS	FRONT DOOR LOCK SWITCH	FH	FUEL HOSE (PER FT.)	GTDC	GAS TANK DOOR CABLE
FDS	FRONT DRIVE SHAFT	FIL	FUEL INJECTION LINE	GTDL	GAS TANK DOOR LATCH
FEM	FRONT ENGINE MOUNT	FIWH	FUEL INJECTION WIRING HARNESS	G	GASKET
DOGB	FRONT ENGINE MOUNT (DOG BONE)	FI	FUEL INJECTOR	GK	GASKET KIT
FEP	FRONT EXHAUST PIPE	FUEL	FUEL LINE	GS	GASKET SEALER
FHS	FRONT HEIGHT SENSOR	FMF	FUEL MANIFOLD	GA	GAUGE
FHUB	FRONT HUB	FMA	FUEL METER ASSEMBLY	GL	GEAR LUBE (PER LB.)
FPWS	FRONT POWER WINDOW SWITCH	FPRC	FUEL PRESSURE REG-CALIBRATOR	GR	GEARSHIFT ROD
FSE	FRONT SEAT	FPRG	FUEL PRESSURE REGULATOR	GP	GLOW PLUG
FST	FRONT SEAT TRACK	FP	FUEL PUMP	GPC	GLOW PLUG CONTROLLER
FSPR	FRONT SPRING	FPR	FUEL PUMP RELAY	GPM	GLOW PLUG MODULE
FSA	FRONT STRUT ASSEMBLY	FSOS	FUEL PUMP SHUT OFF SOLENOID	GPR	GLOW PLUG RELAY
FSSC	FRONT STRUT CARTRIDGE	FSSW	FUEL PUMP SHUT OFF SWITCH	GPT	GLOW PLUG TIMER
FSB	FRONT SWAY BAR	FRL	FUEL RAIL	GOV	GOVERNOR ASSY
FSBB	FRONT SWAY BAR BUSHINGS	FUR	FUEL REGULATOR	GOVG	GOVERNOR GEAR
FTP	FRONT TRANSMISSION PUMP	FRH	FUEL RETURN HOSE	GF	GREASE FITTING
FTS	FRONT TRANSMISSION OIL SEAL	FSC	FUEL SYSTEM CLEANER	HES	HALL-EFFECT SWITCH
FWM	FRONT WINDOW MOTOR	FT	FUEL TANK	HAL	HALOGEN SEALED BEAM
FWR	FRONT WINDOW REGULATOR	FTB	FUEL TANK BREATHER	HWS	HAZARD WARNING SWITCH
FWT	FRONT WINDOW TRANSMISSION	FTFH	FUEL TANK FILLER HOSE	HG	HEAD GASKET
FCA	FUEL CHARGING ASSEMBLY	FTPT	FUEL TANK PROTECTOR PLATE	HGK	HEAD GASKET KIT
FCOM	FUEL COMPUTER	FTSU	FUEL TANK SENDING UNIT	HGS	HEAD GASKET SET
FD	FUEL DISTRIBUTOR	FTSV	FUEL TANK SPLITTER VALVE	HAS	HEADLIGHT ADJUSTMENT SCREW
FDM	FUEL DISTRIBUTOR MANIFOLD	FTSS	FUEL TANK SPLITTER VALVE SWITCH	HLA	HEADLIGHT ASSEMBLY
FEV	FUEL ENRICHMENT VALVE	FGS	FULL CONTACT SHIM	HCR	HEADLIGHT CLOSURE RELAY
FF	FUEL FILTER	F	FUSE	HDS	HEADLIGHT DIMMER SWITCH
FHC	FUEL FILTER HOSE CLAMP	FUB	FUSE BOX	HLM	HEADLIGHT MOTOR

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED “HEADLIGHT” THRU “OIL”

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
HLS	HEADLIGHT SWITCH	HB	HUB BEARING	INJP	INJECTION PUMP
HEAD	HEADREST	HBPV	HYDRAULIC BY-PASS VALVE	IPDB	INJECTION PUMP DRIVE BELT
HRV	HEAT RISER VALVE	HCYL	HYDRAULIC CYLINDER	IPG	INJECTION PUMP GEAR
HADD	HEATED AIR DOOR ASSEMBLY	HF	HYDRAULIC FLUID	IPW	INJECTION WIRING
HADS	HEATED AIR DOOR SENSOR	HSP	HYDRAULIC SUPPORT PLATE	ICBK	INNER CV BOOT KIT
HCA	HEATER CONTROL ASSEMBLY	HBCV	HYDROBOOST CHECK VALVE	ISSB	INNER SHAFT SUPPORT BEARING
HCC	HEATER CONTROL CABLE	HBU	HYDROBOOST UNIT	ITRE	INNER TIE ROD END
HCV	HEATER CONTROL VALVE	IACS	IDLE AIR CONTROL SOLENOID	IVR	INSTRUMENT VOLTAGE REGULATOR
HTC	HEATER CORE	ILC	IDLE LOAD COMPENSATOR	IM	INTAKE MANIFOLD
HD	HEATER DOOR	ISCA	IDLE SPEED CONTROL ACTUATOR	IMG	INTAKE MANIFOLD GASKET
HH	HEATER HOSE (PER FT.)	IDSM	IDLE SPEED CONTROL MOTOR	IV	INTAKE VALVE
HHC	HEATER HOSE CLAMP	ISS	IDLE STOP SOLENOID	INTC	INTERCOOLER
HSEN	HEIGHT SENSOR	ISW	IDLE SWITCH	IEP	INTERMEDIATE EXHAUST PIPE
HELI	HELICOIL	IA	IDLER ARM	IWR	INTERMITTENT WIPER RELAY
HBR	HIGH BLOWER RELAY	IAB	IDLER ARM BUSHING	IP	INTRUMENT PANEL
HPL	HIGH PRESSURE LINE	IDLP	IDLER PULLEY	IPWH	INTRUMENT PANEL WIRING HARNESS
HVGL	HIGH VELOCITY GREASE - LUBE	ISA	IGN SWITCH ACTUATOR(WISHBONE)	JBA	JAKE BRAKE ASSEMBLY
HLRS	HIGH-LOW RANGE SYNCRINIZER	ICAP	IGNITION CAPACITOR	KS	KEY SWITCH
HOL	HOOD LATCH	ICO	IGNITION COIL	KMC	KEYBOARD MESSAGE CENTER
HOLR	HOOD LATCH RELEASE	ICOP	IGNITION COIL PACK	KFA	K-FRAME ASSEMBLY
HLSS	HOOD LIFT SUPPORT SHOCK	IC	IGNITION CONDENSOR	KDS	KICKDOWN SOLENOID
HRC	HOOD RELEASE CABLE	II	IGNITION IGNITOR	KP	KING PIN
H	HORN ASSEMBLY	ILCY	IGNITION LOCK CYLINDER	KPB	KING PIN BUSHING
HORC	HORN CONTACT	IGM	IGNITION MODULE	KPBS	KING PIN BUSHING SET
HR	HORN RELAY	IS	IGNITION SWITCH	KPS	KING PIN SET
HS	HORN SWITCH	IT	IGNITION TRIGGER	KNS	KNOCK SENSOR
HOSE	HOSE	I	IGNITOR	LL	LATERAL LINK
HC	HOSE CLAMP	INDM	INDUCTION MANIFOLD	MML	LEFT ENGINE MOUNT
HIC	HOT IDLE COMPENSATOR	INMG	INDUCTION MANIFOLD GASKET	LRWC	LEFT REAR WHEEL CYLINDER

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
LCPR	LEVEL CONTROL PRESSURE RESERVOIR	MTS	MANIFOLD TEMPERATURE SENSOR	NS	NEEDLE & SEAT
LCV	LEVEL CONTROL VALVE	MPOS	MANUAL POSITION SENSOR	NBTC	NEGATIVE BATTERY CABLE
LB	LIGHT BULB	MSFT	MANUAL SHAFT	NSS	NEUTRAL SAFETY SWITCH
L	LINKAGE	MSS	MANUAL SHAFT SEAL	NE	NEW ENGINE
LNB	LINKAGE BUSHING	MT	MANUAL TRANSMISSION	NT	NEW TIRE
LC	LOCK CYLINDER	MAPS	MAP SENSOR	N	NUT
LLN	LOCKABLE LUG NUT	MAFS	MASS AIR FLOW SENSOR	OD	ODOMETER
SERV	LOCKING SERVO	MC	MASTER CYLINDER	OC	OIL COOLER
SERC	LOCKING SERVO CABLE	MCOK	MASTER CYLINDER OVERHAUL KIT	OCL	OIL COOLER LINE
LM	LOGIC MODULE	MCRC	MASTER CYLINDER RESERVOIR COVER	ODT	OIL DIPSTICK TUBE
LFR	LOW FUEL RELAY	MBS	MATCHED BELT SET	OPF	OIL FEED PIPE
LOLS	LOW OIL LEVEL SENSOR	MGS	MATCHED GEAR SET	OF	OIL FILTER
LPHR	LOW PRESSURE A-C HOSE (REAR)	MCU	MCU PROCESSOR MODULE	OFA	OIL FILTER ADAPTER
LTS	LOW TEMPERATURE SWITCH	MJET	METERING JET	OFL	OIL FILTER LINES
LBJ	LOWER BALL JOINT	MR	METERING ROD	OL	OIL LINE
LCA	LOWER CONTROL ARM	MIC	MICROPROCESSOR	OP	OIL PAN
LCAB	LOWER CONTROL ARM BUSHING	MITS	MID-TEMPERATURE SWITCH	OPG	OIL PAN GASKET
LRH	LOWER RADIATOR HOSE	MIR	MIRROR	OPGS	OIL PAN GASKET SET
LSBE	LOWER SHAFT BEARING	MCC	MIRROR CONTROL CABLE	OPGA	OIL PRESSURE GAUGE
LSB	LOWER SHAFT BUSHING	MCSW	MIRROR CONTROL SWITCH	OPS	OIL PRESSURE SENDER
LN	LUG NUT	MCS	MIXTURE CONTROL SOLENOID	OPSW	OIL PRESSURE SWITCH
LNK	LUG NUT KEY	MSH	MODE SELECT HARNESS	OPU	OIL PUMP
LNS	LUG NUT SET	MOD	MODULE	OPD	OIL PUMP DRIVE
MW	MACHINE WORK	MM	MOTOR MOUNT	OPDG	OIL PUMP DRIVE COVER GASKET
MWW	MAG WHEEL WEIGHT	MF	MUDFLAPS	OPOR	OIL PUMP O RING
MRB	MAIN AND ROD BEARINGS	M	MUFFLER	OPOS	OIL PUMP OIL SEAL
MB	MAIN BEARING	MCL	MUFFLER CLAMP	OPUS	OIL PUMP SEAL
MD	MAIN DIAPHRAM	MSW	MULTIFUNCTION SWITCH	ORH	OIL RETURN HOSE
MPS	MANIFOLD PRESSURE SENSOR	MGMC	MULTIGAUGE & MESSAGE CENTER	ORP	OIL RETURN PIPE

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED “OIL” THRU “SELF”

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
OS	OIL SEAL	PSB	POWER STEERING BELT	QWS	QUARTER WINDOW SWITCH
OR	O-RING	PSDC	POWER STEERING DIPSTICK CAP	R12	R12 FREON
OCBK	OUTER CV BOOT KIT	PSF	POWER STEERING FLUID	R134	R134 FREON
OPSA	OUTPUT SHAFT ASSEMBLY	PSH	POWER STEERING HOSE	RAPB	RACK AND PINION BOOT
OPSB	OUTPUT SHAFT BEARING	PSSW	POWER STEERING PRESSURE SWITCH	KRA	RACK ASSEMBLY
OPSS	OUTPUT SHAFT SEAL	PSP	POWER STEERING PUMP	R	RADIATOR
ODS	OVERDRIVE SOLENOID	PSPB	POWER STEERING PUMP BRACKET	RC	RADIATOR CAP
OV	OVERRUN VALVE	PSPS	POWER STEERING PUMP DRIVE SEAL	RDC	RADIATOR DRAIN COCK
OX	OXYGEN SENSOR	PSPK	POWER STEERING PUMP OH KIT	RF	RADIATOR FLUSH
PBC	PARKING BRAKE CABLE	PSPR	POWER STEERING PUMP RESERVOIR	RRC	RADIATOR RE-CORE
PAPA	PARKING PAWL	PSRH	POWER STEERING RACK & PINION	RAD	RADIO
PADA	PARKING PAWL DETENT ASSY	PT	POWER STEERING RETURN HOSE	RARM	RADIUS ARM
PCVH	PCV HOSE	PWM	POWER TRANSISTOR	RARB	RADIUS ARM BUSHINGS
PCV	PCV VALVE	PBA	POWER WINDOW MOTOR	RAA	REAR ACTUATOR ASSY
PUS	PICK-UP SENSOR	PBS	POWERMASTER BOOSTER ASSY	RAS	REAR AIR SPRING
PIB	PILOT BEARING	PCS	PRESSURE CONTROL SOLENOID	RA	REAR AXLE
PB	PINION BEARING	PP	PRESSURE PLATE	RAAS	REAR AXLE ASSEMBLY
PS	PINION SEAL	PREG	PRESSURE REGULATOR VALVE	RAXB	REAR AXLE BEARING
P	PISTON	PRV	PRESSURE RELIEF VALVE	RAB	REAR AXLE BOOT
PIP	PISTON PIN	PC	PRINTED CIRCUIT BOARD	RAC	REAR AXLE CARRIER
PA	PITMAN ARM	PPS	PROPELLER SHAFT	RAXS	REAR AXLE SHAFT
PVTS	PIVOT SHAFT	PV	PROPORTIONING VALVE	RBP	REAR BACKING PLATE
PLEM	PLENUM	PUL	PULLEY	RBM	REAR BLOWER MOTOR
POAV	POA VALVE	PAF	PULSE AIR FEEDER	RBMR	REAR BLOWER MOTOR RELAY
PTS	POINTS	PAV	PULSE AIR VALVE	RBMS	REAR BLOWER MOTOR SWITCH
PBTC	POSITIVE BATTERY CABLE	PFCV	PUMP FLOW CONTROL VALVE	RBR	REAR BRAKE ROTOR
PBB	POWER BRAKE BOOSTER	PUCV	PURGE CONTROL VALVE	RCS	REAR CAMSHAFT SEAL
PM	POWER MODULE	PR	PUSH ROD	RCSP	REAR COIL SPRINGS
PSS	POWER SEAT SWITCH	QWM	QUARTER WINDOW MOTOR	RDBP	REAR DISC BRAKE PADS

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
RDH	REAR DOOR HANDLE	RSK	REAR STEERING KNUCKLE	RESO	RESONATOR
RDL	REAR DOOR LATCH	RSA	REAR STRUT ASSY	MMR	RIGHT ENGINE MOUNT
RDLP	REAR DOOR LIFT PISTONS	RSSC	REAR STRUT CARTRIDGE	RRWC	RIGHT REAR WHEEL CYLINDER
RDSO	REAR DOOR LOCK SOLENOID	RSC	REAR STRUT CARTRIDGES	RIP	RING & PINION
RDLS	REAR DOOR LOCK SWITCH	RTRE	REAR TIE ROD END	RG	RING GEAR
REF	REAR END FLUID (PER PINT)	RTRO	REAR TORQUE ROD	RI	RINGS
REM	REAR ENGINE MOUNT	RTB	REAR TRACKING BAR	ROC	ROCKER
RHC	REAR HEATER CORE	RTRB	REAR TRACKING ROD BUSHINGS	RAR	ROCKER ARM
RHS	REAR HEIGHT SENSOR	RTA	REAR TRAILING ARM	RAN	ROCKER ARM NUT
RLL	REAR LATERAL LINK	RTAB	REAR TRAILING ARM BUSHINGS	ROSA	ROCKER ARM SHAFT ASSEMBLY
FLS	REAR LEAF SPRING	RTS	REAR TRANSMISSION OIL SEAL	RAST	ROCKER ARM STUD
RLS	REAR LEAF SPRING	RUBJ	REAR UPPER BALL JOINT	RMBS	ROD & MAIN BEARINGS SET
FLSB	REAR LEAF SPRING BUSHINGS	RUCA	REAR UPPER CONTROL ARM	RRR	ROD AND REPAIR RADIATOR
RLSB	REAR LEAF SPRING BUSHINGS	RUCB	REAR UPPER CONTROL ARM BUSHINGS	RB	ROD BEARING
FLSS	REAR LEAF SPRING SHACKLES	RWB	REAR WHEEL BEARING	ROD	ROD OUT RADIATOR
RLSS	REAR LEAF SPRING SHACKLES	RWH	REAR WHEEL HUB	RTR	ROTOR
RLCA	REAR LOWER CONTROL ARM	RWS	REAR WHEEL SEAL	SCOK	S-CAM OVERHAUL KIT
RLCB	REAR LOWER CONTROL ARM BUSHINGS	RWDS	REAR WINDOW DEFOGGER SWITCH	S	SEAL
RS	REAR MAIN OIL SEAL	RWM	REAR WINDOW MOTOR	HL	SEALED BEAM HEADLIGHT
ROX	REAR OXYGEN SENSOR	RWR	REAR WINDOW REGULATOR	SBLT	SEAT BELT
RPT	REAR POLLUTION TUBE	RWT	REAR WINDOW TRANSMISSION	SBCM	SEAT BELT CONTROL MODULE
RPWS	REAR POWER WINDOW SWITCH	WWPR	REAR WINDSHIELD WASHER PUMP	SBLS	SEAT BELT LIMIT SWITCH
RRA	REAR RADIUS ARM	RWWW	REAR WINDSHIELD WIPER MODULE	SBM	SEAT BELT MOTOR
RRAB	REAR RADIUS ARM BUSHINGS	WWWMR	REAR WINDSHIELD WIPER MOTOR	SBRM	SEAT BELT RELEASE SWITCH
RSAB	REAR SHOCK ABSORBER	RD	RECEIVER DRIER	SBRA	SEAT BELT RETRACTOR ASSY
RSPN	REAR SPINDLE	REG	REGULATOR	SBWB	SEAT BELT WARNING BUZZER
RSPR	REAR SPRING	RL	RELAY	SECC	SEAT CONTROL CABLE
RSB	REAR STABILIZER BAR	RENG	REMANUFACTURED ENGINE	SEAT	SEAT SET
RSBB	REAR STABILIZER BAR BUSHINGS	RES	RESISTOR	SLAN	SELF-LOCKING AXLE NUT

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED "SENDING" THRU "TORQUE"

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
SU	SENDING UNIT	SCC	SPARK CONTROL COMPUTER	SCB	STEERING COLUMN BOOT
SDER	SENSING & DIAGNOSTIC ENERGY RESERVE	SPBR	SPARK PLUG BOOT RELEASE	SCS	STEERING COLUMN SHAFT
SDMD	SENSING & DIAGNOSTIC MODULE	SPW	SPARK PLUG WIRE	STD	STEERING DAMPER
SEN	SENSOR	SPWS	SPARK PLUG WIRE SET	RAG	STEERING FLEX COUPLER
SB	SERPENTINE BELT	SP	SPARK PLUGS	SG	STEERING GEAR
SHC	SHIFT CABLE	SCA	SPEED CONTROL ASSY	SGA	STEERING GEAR ASSEMBLY
SCH	SHIFT COLUMN HOUSING	SC	SPEEDOMETER CABLE	SGOS	STEERING GEAR OVERHAUL SET
SCJ	SHIFT COLUMN JACKET	SCWH	SPEEDOMETER CABLE W-HOUSING	SGP	STEERING GEAR PLUG
SCSO	SHIFT CONTROL SOLENOID	SDG	SPEEDOMETER DRIVE GEAR	SK	STEERING KNUCKLE
SI	SHIFT INDICATOR	SDVG	SPEEDOMETER DRIVEN GEAR	SKA	STEERING KNUCKLE ARM
SLSO	SHIFT LOCK SOLENOID	SH	SPEEDOMETER HEAD	RAP	STEERING RACK AND PINION ASSEMBLY
SLSW	SHIFT LOCK SWITCH	SPIN	SPINDLE	SRBO	STEERING RACK BOOT
SR	SHIFT ROD	SPIA	SPINDLE ARM	SRMB	STEERING RACK MOUNTING BUSHINGS
SRB	SHIFT ROD BUSHINGS	SPRB	SPRING BRAKE	SRPK	STEERING RACK OVERHAUL KIT
SSC	SHIFT SELECTOR CABLE	STAB	STABILIZER BAR	SSSS	STEERING SECTOR SHAFT SEAL
SSL	SHIFT SELECTOR LEVER	STBB	STABILIZER BAR BUSHINGS	SSA	STEERING SENSOR ASSY
SDC	SHIFTER DETENT CABLE	SBLB	STABILIZER BAR LINK BUSHING KIT	SSSP	STEERING STABILIZER STOP
SA	SHOCK ABSORBER	SBLK	STABILIZER BAR LINK BUSHING KIT	STW	STEERING WHEEL
SS	SHOP SUPPLIES	STR	STARTER	SMA	STEPPER MOTOR ACTUATOR
SHTB	SHORT BLOCK	STA	STARTER ARMATURE	SL	STOP LEAK
SHDH	SHROUD HOLD DOWN HARDWARE	STBR	STARTER BRUSHES	STRP	STRIKER PLATE
SCG	SIDE COVER GASKETS	STBU	STARTER BUSHINGS	ST	STRUT ASSEMBLY
SDR	SIDE DOOR ROLLER	SD	STARTER DRIVE	STRD	STRUT ROD
SLA	SLACK ADJUSTER	STRE	STARTER RELAY	STRB	STRUT ROD BUSHINGS
SF	SOCK FILTER	STSO	STARTER SOLENOID	STUB	STUB AXLE SHAFT
SOL	SOLENOID	STLS	STEELS	STUD	STUD
SAV	SOLENOID ADVANCE VALVE	STAR	STEERING ARM	ACDM	SUCTION & DISCHARGE MANIFOLD
SOCB	SOLENOID CHECK BALL	SCOL	STEERING COLUMN	SRA	SUN ROOF ASSEMBLY
SVTP	SOLE-VAC THROTTLE POSITIONER	SCOA	STEERING COLUMN ACTUATOR	SRDH	SUN ROOF DRAIN HOSE

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
SRDC	SUN ROOF DRIVE CABLE	TCA	TEMPERATURE CONTROL ASSEMBLY	TL	THROTTLE LINKAGE
SRDS	SUN ROOF DRIVE SLIDE	TCC	TEMPERATURE CONTROL CABLE	TLKB	THROTTLE LINKAGE BUSHINGS
SRMD	SUN ROOF MANUAL DRIVE ASSEMBLY	TMPG	TEMPERATURE GAUGE	TPS	THROTTLE POSITION SENSOR
SRM	SUN ROOF MOTOR	TSU	TEMPERATURE SENDING UNIT	TPSW	THROTTLE POSITION SWITCH
SRS	SUN ROOF SWITCH	TS	TEMPERATURE SENSOR	TRSP	THROTTLE RETURN SPRING
SUCH	SUPERCHARGER ASSEMBLY	TSW	TEMPERATURE SWITCH	TOB	THROW OUT BEARING
SUCB	SUPERCHARGER BELT	TENC	TENSION CABLE	TRE	TIE ROD END
SBB	SWAY BAR BRACKET	TERP	TERMINAL PROTECTORS	TRES	TIE ROD END SLEEVE
SBBB	SWAY BAR BRACKET BUSHINGS	TABV	THERMACTOR AIR BY-PASS VALVE	TIH	TILT HOUSING
SCV	SWIRL CONTROL VALVE	TAV	THERMACTOR AIR VALVE	TB	TIMING BELT
SW	SWITCH	TVSW	THERMAL VACUUM SWITCH	TBCG	TIMING BELT COVER GASKET
75W90	SYNTHETIC GEAR LUBE	TCTS	THERMO COOLANT TIME SWITCH	TBIP	TIMING BELT IDLER PULLEY
TTS	TAB-TAD SOLENOID	THPS	THERMO PURGE SWITCH	TBT	TIMING BELT TENSIONER
TACG	TACH GENERATOR	T	THERMOSTAT	TCH	TIMING CHAIN
TACH	TACHOMETER	TG	THERMOSTAT GASKET	TCB	TIMING CHAIN TENSIONER
TALB	TAG LIGHT BULB	TH	THERMOSTAT HOUSING	TCT	TIMING CHAIN TENSIONER
TGWM	TAIL GATE WINDOW MOTOR	TVS	THERMOSTATIC VACUUM SENSOR	TCOV	TIMING COVER
TGWR	TAIL GATE WINDOW REGULATOR	TFM	THICK FILM MODULE	TCG	TIMING COVER GASKET
TGWS	TAIL GATE WINDOW SWITCH	TBLB	THIRD BRAKE LIGHT BULB	TCGS	TIMING COVER GASKET SET
TLB	TAIL LIGHT BULB	TWSV	THREE WAY SOLENOID VALVE	TCOS	TIMING COVER SEAL
TLL	TAIL LIGHT LENS	THBV	THROTTLE AIR BY-PASS VALVE	TMA	TIMING MARK ADJUSTOR
TP	TAIL PIPE	TBAI	THROTTLE BODY AIR INTAKE	TIPS	TIMING POSITION SENSOR
TPE	TAIL PIPE EXTENSION	TBI	THROTTLE BODY INJECTOR	TDT	TIRE DISPOSAL TAX
TPH	TAIL PIPE HANGER	TBIG	THROTTLE BODY INTAKE GASKET	TPA	TIRE PATCH
TGLC	TAILGATE LOCK CYLINDER	TBS	THROTTLE BODY SPACER	TPL	TIRE PLUG
TSOL	TAILGATE LOCK SOLENOID	TBTS	THROTTLE BODY TEMP SENSOR	TCSW	TOP CONTROL SWITCH
TSCS	TCS SOLENOID CONTROL SWITCH	THCC	THROTTLE CONTROL CABLE	TCCS	TORQUE CONVERTER CLUTCH SOLENOID
TCVS	TCS VACUUM SOLENOID	TKA	THROTTLE KICKER ACTUATOR	TCLS	TORQUE CONVERTER LOCK UP SOLENOID
TDCS	TDC SENSOR	TKR	THROTTLE KICKER RELAY	TC	TORQUE CONVERTOR

DEFAULT PART CODES AND PART DESCRIPTIONS
THIS LIST INCLUDE NON-INVENTORY PARTS ONLY

PARTS LISTED “TORSION” THRU “YOKE”

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
TORB	TORSION BAR	TLA	TRUNK LATCH	VBV	VACUUM BLEED VALVE
TBSB	TORSION BAR SUPPORT BUSHINGS	TLC	TRUNK LOCK CYLINDER	VDV	VACUUM DELAY VALVE
TBSL	TORSION BAR SUPPORT LINK	TRC	TRUNK RELEASE CABLE	VD	VACUUM DIAPHRAM
TLS	TRAILER LEAF SPRING	TURC	TURBO CONTROL CENTER	VH	VACUUM HOSE (PER FT.)
TLSB	TRAILER LEAF SPRING BUSHINGS	TURI	TURBO INLET PIPE	VACL	VACUUM LINE (PER FT.)
TLSS	TRAILER LEAF SPRING SHACKLE	TURO	TURBO OUTLET PIPE	VP	VACUUM PUMP
TA	TRANS-AXLE	TURB	TURBOCHARGER ASSEMBLY	VRS	VACUUM REGULATOR SOLENOID
TAG	TRANS-AXLE GASKET SET	TURH	TURBOCHARGER HOSE	VACR	VACUUM RESERVOIR
TRAN	TRANSFER CASE	TBD	TURN BRAKE DRUM	VT	VACUUM TANK
TRGS	TRANSFER CASE GASKET SET	TBR	TURN BRAKE ROTOR	VTC	VACUUM TEE CONNECTOR
TROK	TRANSFER CASE OVERHAUL KIT	TDR	TURN DRUMS AND ROTORS	VTR	VACUUM TREE
TCS	TRANSFER CASE SEAL	TFLY	TURN FLYWHEEL	V	VALVE
TCL	TRANSMISSION COOLER LINES	TSB	TURN SIGNAL BULB	VB	VALVE BODY
TFT	TRANSMISSION FILL TUBE	TSL	TURN SIGNAL LENS	VCG	VALVE COVER GASKET
TFTS	TRANSMISSION FILL TUBE SEAL	TSS	TURN SIGNAL SWITCH	VCGS	VALVE COVER GASKET SET
TF	TRANSMISSION FILTER	UJ	U-JOINT	VG	VALVE GUIDE
TFK	TRANSMISSION FILTER KIT	UBCL	UNIVERSAL BOOT CLAMP (LARGE)	VL	VALVE LIFTERS
TFLK	TRANSMISSION FLUSH KIT	UBCS	UNIVERSAL BOOT CLAMP (SMALL)	VST	VALVE SEATS
TGS	TRANSMISSION GASKET SET	UBJ	UPPER BALL JOINT	VSPR	VALVE SPRING
TRL	TRANSMISSION LINE	UCA	UPPER CONTROL ARM	VS	VALVE STEM
TMOD	TRANSMISSION MODULATOR	UCAB	UPPER CONTROL ARM BUSHING	VSOS	VALVE STEM OIL SEAL
TM	TRANSMISSION MOUNT	UMJ	UPPER MAST JACKET BEARING	VSSS	VALVE STEM SEAL
TOC	TRANSMISSION OIL COOLER	UH	UPPER RADIATOR HOSE	VIRA	VALVES IN RECEIVER ASSEMBLY
TOPS	TRANSMISSION OIL PRESS SWITCH	USMB	UPPER STRUT MOUNT BEARING	VSS	VEHICLE SPEED SENSOR
TOK	TRANSMISSION OVERHAUL KIT	USMK	UPPER STRUT MOUNT KIT	VF	VENT FILTER
TRP	TRANSMISSION PAN	UENG	USED ENGINE	VOS	VENT OIL SEPERATOR
TPG	TRANSMISSION PAN GASKET	UTI	USED TIRE	VR	VOLTAGE REGULATOR
TSA	TRANSMISSION SHIFTER ARM	UT	USED TRANSMISSION	VOLT	VOLTMETER
TMFC	TRIPMETE FUEL COMPUTER	VA	VACUUM ADVANCE	WBEC	WARNING BEACON

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
WG	WASTE GATE	WWN	WINDSHIELD WIPER NOZZLE		
WGH	WASTE GATE HOSE	WWR	WINDSHIELD WIPER REFILL		
WA	WASTEGATE ACTUATOR	WWRE	WINDSHIELD WIPER RESERVOIR		
WCP	WATER COOLANT PIPE	WWS	WINDSHIELD WIPER SWITCH		
WFS	WATER FUEL SEPERATOR	WWTG	WINDSHIELD WIPER TIMER GOVERNOR		
WP	WATER PUMP	WN	WING NUT		
WPB	WATER PUMP BELT	W	WIRE (PER FT.)		
WPG	WATER PUMP GASKET	WIRE	WIRE (PER FT.)		
WPL	WATER PUMP LUBE	WICO	WIRE CONNECTOR		
WBOK	WEDGE BRAKE OVERHAUL KIT	WIC	WIRE CONNECTOR		
WB	WHEEL BEARING	WHDC	WIRE HOLD DOWN CLIPS		
WBG	WHEEL BEARING GREASE	WH	WIRING HARNESS		
WC	WHEEL CYLINDER	WHC	WIRING HARNESS CONNECTOR		
WCK	WHEEL CYLINDER KIT	WOTS	WOT SWITCH		
WS	WHEEL SEAL	Y	YOKE		
WSS	WHEEL SPEED SENSOR				
WST	WHEEL STUD				
WW	WHEEL WEIGHT				
WM	WINDOW MOTOR				
WR	WINDOW REGULATOR				
REMT	WINDOW REGULATOR & MOTOR				
WSW	WINDOW SWITCH				
WWF	WINDSHIELD WASHER FLUID				
WWP	WINDSHIELD WASHER PUMP				
WWA	WINDSHIELD WIPER ARM				
WWB	WINDSHIELD WIPER BLADE				
WWBU	WINDSHIELD WIPER BUSHING				
WWL	WINDSHIELD WIPER LINKAGE				
WWM	WINDSHIELD WIPER MOTOR				